

PRODUCT INDEX

Designed to make faster connections

Range of quick release couplings is designed to make life easier for operators who need to connect and disconnect equipment quickly and easily.

4.
3

	Series	Page		Series	Page		
	17 Series Female BSPP Coupler	PC17-FC	478		Series 21S Safety Lock Male BSPT Probe	PC21-MPS	479
	17 Series Female BSPP Probe	PC17-FP	478		Series 21S Safety Lock Coupler to Hose Tail	PC21-HCS	479
	17 Series Male BSPT Coupler	PC17-MC	478		Series 21S Safety Lock Probe to Hose Tail	PC21-HPS	479
	17 Series Male BSPT Probe	PC17-MP	478		Series 23 Female BSPP Coupler	PC23-FC	479
	17 Series Coupler to Hose Tail	PC17-HC	478		Series 23 Female BSPP Probe	PC23-FP	479
	17 Series Probe to Hose Tail	PC17-HP	478		Series 23 Male BSPT Coupler	PC23-MC	479
	19 Series Female BSPP Coupler	PC19-FC	478		Series 23 Male BSPT Probe	PC23-MP	479
	19 Series Female BSPP Probe	PC19-FP	478		Series 23 Coupler to Hose Tail	PC23-HC	479
	19 Series Male BSPT Coupler	PC19-MC	478		Series 23 Probe to Hose Tail	PC23-HP	479
	19 Series Male BSPT Probe	PC19-MP	478		Series 25 Female BSPP Coupler	PC25-FC	480
	19 Series Coupler to Hose Tail	PC19-HC	478		Series 25 Female BSPP Probe	PC25-FP	480
	19 Series Probe to Hose Tail	PC19-HP	478		Series 25 Male BSPT Coupler	PC25-MC	480
	21 Series Female BSPP Coupler	PC21-FC	478		Series 25 Male BSPT Probe	PC25-MP	480
	21 Series Female BSPP Probe	PC21-FP	478		Series 25 Coupler to Hose Tail	PC25-HC	480
	Series 21 Male BSPT Coupler	PC21-MC	479		Series 25 Probe to Hose Tail	PC25-HP	480
	Series 21 Male BSPT Probe	PC21-MP	479		Series 25S Safety Lock Female BSPP Coupler	PC25-FC	480
	Series 21 Coupler to Hose Tail	PC21-HC	479		Series 25S Safety Lock Female BSPP Probe	PC25-FPS	480
	Series 21 Probe to Hose Tail	PC21-HP	479		Series 25S Safety Lock Male BSPT Coupler	PC25-MC	480
	Series 21S Safety Lock Female BSPP Coupler	PC21-FCS	479		Series 25S Safety Lock Male BSPT Probe	PC25-MPS	480
	Series 21S Safety Lock Female BSPP Probe	PC21-FPS	479		Series 25S Safety Lock Coupler to Hose Tail	PC25-HCS	480
	Series 21S Safety Lock Male BSPT Coupler	PC21-MCS	479		Series 25S Safety Lock Probe to Hose Tail	PC25-HPS	480

PRODUCT INDEX

	Series	Page		Series	Page		Series	Page			
	Series 60 Female BSPP Coupler	PC60-FC	480		Series PCIA Instantair Male BSPT Coupler	PCIA-MC	482		Claw Lock Coupling O Ring Seal	CCRS	483
	Series 60 Male BSPT Coupler	PC60-MC	480		Series PCIA Instantair Coupler to Hose Tail	PCIA-HC	482		Claw Lock Coupling Steel Female Threaded BSPP	CCF	483
	Series 60 Coupler to Hose Tail	PC60-HC	480		Series PCIA Instantair Female BSPP Probe	PCIA-FP	482		Claw Lock Coupling Steel End Cap	CCEC	484
	Series 60 Probe to Hose Tail	PC60-HP	481		Series PCIA Instantair Male BSPT Probe	PCIA-MP	482		Claw Lock Coupling Brass Male Thread BSPP	BCCM	484
	Series 100 Female BSPP Coupler	PC100-FC	481		Series PCIA Instantair Probe to Hose Tail	PCIA-HP	482		Claw Lock Coupling Brass Female Thread BSPP	BCCF	484
	Series 100 Female BSPP Probe	PC100-FP	481		Series PCIM Macdonald Female BSPP Coupler	PCIM-FC	482		Claw Lock Coupling Hose Tail Brass Type	BCCHT	484
	Series 100 Male BSPT Coupler	PC100-MC	481		Series PCIM Macdonald Female BSPP Probe	PCIM-FP	482		Claw Lock Coupling Brass End Cap	BCCEC	484
	Series 100 Male BSPT Probe	PC100-MP	481		Series PCIM Macdonald Male BSPT Coupler	PCIM-MC	482		Claw Lock Coupling Hose Tail Brass Safety Type	BCCHTS	484
	Series 100 Coupler to Hose Tail	PC100-HC	481		Series PCIM Macdonald Male BSPT Probe	PCIM-MP	482		Claw Lock Coupling Brass Triple Outlet	BCC3WAY	484
	Series 100 Probe to Hose Tail	PC100-HP	481		Series PCIM Macdonald Coupler to Hose Tail	PCIM-HC	482		Shot Blast Couplings Brass Hose Coupling	BSBC	484
	Series PCA19 Airflow and Vortex Hose Tail	PCA19-FC	481		Series PCIM Macdonald Probe to Hose Tail	PCIM-HP	483		Shot Blast Couplings Brass Female BSPP Thread	BTSC	484
	Series PCA19 Airflow and Vortex Male BSPT Coupler	PCA19-MC	481		Emergency Couplings Male C Coupling	ECM-C	483		Shot Blast Couplings Brass Nozzle Holders	BNH	484
	Series PCA19 Airflow and Vortex Coupler to Hose Tail	PCA19-HC	481		Emergency Couplings Female C Coupling	ECF-C	483		Shot Blast Couplings Aluminium Hose Coupling	ASBC	484
	Series PCV19 Airflow and Vortex Female BSPP Coupler	PCV19-FC	481		Emergency Couplings Self Sealing Valve for C & CA	ECS-C	483		Shot Blast Couplings Aluminium Female BSPP Thread	ATSC	484
	Series PCV19 Airflow and Vortex Male BSPT Coupler	PCV19-MC	481		Auxillary Couplings Male C Coupling	ACM-C	483		Shot Blast Couplings Aluminium Hose Nozzle Holders	ANH	484
	Series PCV19 Airflow and Vortex Coupler to Hose Tail	PCV19-HC	481		Auxillary Couplings Female C Coupling	ACF-C	483				
	Series PCV19 Airflow and Vortex Female BSPP Probe	PCV19-FP	481		Service Couplings Self Sealing Valve for C & CA	SCV-C1	483				
	Series PCV19 Airflow and Vortex Male BSPT Probe	PCV19-MP	481		Service Couplings Valve for Male C	SCV-C2	483				
	Series PCV19 Airflow and Vortex Probe to Hose Tail	PCV19-HP	482		Service Couplings Operating Sleeve for Female C	SCS-C1	483				
	Series PCY19 Airflow and Vortex Probe to Twin Coupling	PCY19-TC	482		Claw Lock Coupling Steel Male Thread BSPP	CCM	483				
	Series PCIA Instantair Female BSPP Coupler	PCIA-FC	482		Claw Lock Coupling Hose Tail Steel Type	CCHT	483				

4.
3

For Technical Data please see Section 9

Series 17 Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC17-FC04	04	1/4	35
PC17-FC06	06	3/8	35
PC17-FC08	08	1/2	35

Series 17 Female BSPP Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC17-FP04	04	1/4	35
PC17-FP06	06	3/8	35
PC17-FP08	08	1/2	35

Series 17 Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC17-MC04	04	1/4	35
PC17-MC06	06	3/8	35
PC17-MC08	08	1/2	35

Series 17 Male BSPT Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC17-MP04	04	1/4	35
PC17-MP06	06	3/8	35
PC17-MP08	08	1/2	35

Series 17 Coupler to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC17-HC04	04	1/4	35
PC17-HC05	05	5/16	35
PC17-HC06	06	3/8	35
PC17-HC08	08	1/2	35

Series 17 Probe to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC17-HP04	04	1/4	35
PC17-HP05	05	5/16	35
PC17-HP06	06	3/8	35
PC17-HP08	08	1/2	35

Series 19 Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC19-FC04	04	1/4	35
PC19-FC06	06	3/8	35
PC19-FC08	08	1/2	35

Series 19 Female BSPP Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC19-FP04	04	1/4	35
PC19-FP06	06	3/8	35
PC19-FP08	08	1/2	35

Series 19 Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC19-MC04	04	1/4	35
PC19-MC06	06	3/8	35
PC19-MC08	08	1/2	35

Series 19 Male BSPT Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC19-MP04	04	1/4	35
PC19-MP06	06	3/8	35
PC19-MP08	08	1/2	35

Series 19 Coupling to Hose Tail



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC19-HC04	04	1/4	35
PC19-HC05	05	5/16	35
PC19-HC06	06	3/8	35
PC19-HC08	08	1/2	35

Series 19 Probe to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC19-HP04	04	1/4	35
PC19-HP05	05	5/16	35
PC19-HP06	06	3/8	35
PC19-HP08	08	1/2	35

Series 21 Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-FC02	02	1/8	35
PC21-FC04	04	1/4	35
PC21-FC06	06	3/8	35

Series 21 Female BSPP Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-FP02	02	1/8	35
PC21-FP04	04	1/4	35
PC21-FP06	06	3/8	35

4.
3

QUICK RELEASE COUPLINGS

Series 21 Male BSPT Coupler

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC19-HP04	04	1/4	35
PC19-HP05	05	5/16	35
PC19-HP06	06	3/8	35
PC19-HP08	08	1/2	35



Series 21 Male BSPT Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-MP02	02	1/8	35
PC21-MP04	04	1/4	35
PC21-MP06	06	3/8	35



Series 21 Coupler to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC21-HC04	04	1/4	35
PC21-HC05	05	5/16	35
PC21-HC06	06	3/8	35



Series 21 Probe to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC21-HP04	04	1/4	35
PC21-HP05	05	5/16	35
PC21-HP06	06	3/8	35



Series 21S (Safety Lock) Female BSPP Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-FCS02	02	1/8	35
PC21-FCS04	04	1/4	35
PC21-FCS06	06	3/8	35



Series 21S (Safety Lock) Female BSPP Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-FPS02	02	1/8	35
PC21-FPS04	04	1/4	35
PC21-FPS06	06	3/8	35



Series 21S (Safety Lock) Male BSPT Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-MCS02	02	1/8	35
PC21-MCS04	04	1/4	35
PC21-MCS06	06	3/8	35



Series 21S (Safety Lock) Male BSPT Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC21-MPS02	02	1/8	35
PC21-MPS04	04	1/4	35
PC21-MPS06	06	3/8	35



Series 21S (Safety Lock) Coupler to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC21-HCS04	04	1/4	35
PC21-HCS05	05	5/16	35
PC21-HCS06	06	3/8	35



Series 21S (Safety Lock) Probe to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC21-HPS04	04	1/4	35
PC21-HPS05	05	5/16	35
PC21-HPS06	06	3/8	35



Series 23 Female BSPP Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC23-FC04	04	1/4	35
PC23-FC06	06	3/8	35
PC23-FC08	08	1/2	35



Series 23 Female BSPP Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC23-FP04	04	1/4	35
PC23-FP06	06	3/8	35
PC23-FP08	08	1/2	35



Series 23 Male BSPT Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC23-MC04	04	1/4	35
PC23-MC06	06	3/8	35
PC23-MC08	08	1/2	35



Series 23 Male BSPT Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC23-MP04	04	1/4	35
PC23-MP06	06	3/8	35
PC23-MP08	08	1/2	35



Series 23 Coupler to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC23-HC04	04	1/4	35
PC23-HC05	05	5/16	35
PC23-HC06	06	3/8	35
PC23-HC08	08	1/2	35



Series 23 Probe to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC23-HP04	04	1/4	35
PC23-HP05	05	5/16	35
PC23-HP06	06	3/8	35
PC23-HP08	08	1/2	35



4.
3

Series 25 Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-FC04	04	1/4	35
PC25-FC06	06	3/8	35
PC25-FC08	08	1/2	35

Series 25 Female BSPP Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-FP04	04	1/4	35
PC25-FP06	06	3/8	35
PC25-FP08	08	1/2	35

Series 25 Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-MC04	04	1/4	35
PC25-MC06	06	3/8	35
PC25-MC08	08	1/2	35

Series 25 Male BSPT Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-MP04	04	1/4	35
PC25-MP06	06	3/8	35
PC25-MP08	08	1/2	35

Series 25 Coupler to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC25-HC04	04	1/4	35
PC25-HC05	05	5/16	35
PC25-HC06	06	3/8	35
PC25-HC08	08	1/2	35

Series 25 Probe to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC25-HP04	04	1/4	35
PC25-HP05	05	5/16	35
PC25-HP06	06	3/8	35
PC25-HP08	08	1/2	35

Series 25S (Safety Lock) Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-FCS04	04	1/4	35
PC25-FCS06	06	3/8	35
PC25-FCS08	08	1/2	35

Series 25S (Safety Lock) Female BSPP Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-FPS04	04	1/4	35
PC25-FPS06	06	3/8	35
PC25-FPS08	08	1/2	35

Series 25S (Safety Lock) Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-MCS04	04	1/4	35
PC25-MCS06	06	3/8	35
PC25-MCS08	08	1/2	35

Series 25S (Safety Lock) Male BSPT Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC25-MPS04	04	1/4	35
PC25-MPS06	06	3/8	35
PC25-MPS08	08	1/2	35

Series 25S (Safety Lock) Coupler to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC25-HCS04	04	1/4	35
PC25-HCS05	05	5/16	35
PC25-HCS06	06	3/8	35
PC25-HCS08	08	1/2	35

Series 25S (Safety Lock) Probe to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC25-HPS04	04	1/4	35
PC25-HPS05	05	5/16	35
PC25-HPS06	06	3/8	35
PC25-HPS08	08	1/2	35

Series 60 Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC60-FC04	04	1/4	35
PC60-FC06	06	3/8	35
PC60-FC08	08	1/2	35

Series 60 Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PC60-MC04	04	1/4	35
PC60-MC06	06	3/8	35
PC60-MC08	08	1/2	35

Series 60 Coupler to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC60-HC04	04	1/4	35
PC60-HC05	05	5/16	35
PC60-HC06	06	3/8	35
PC60-HC08	08	1/2	35

QUICK RELEASE COUPLINGS

Series 60 Probe to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PC60-HP04	04	1/4	35
PC60-HP05	05	5/16	35
PC60-HP06	06	3/8	35
PC60-HP08	08	1/2	35



Series 100 Female BSPP Coupler

Part Number	Size (dash)	Coupling Size
PC100-FC06	06	3/8
PC100-FC08	08	1/2



Series 100 Female BSPP Probe

Part Number	Size (dash)	Coupling Size
PC100-FP06	06	3/8
PC100-FP08	08	1/2



Series 100 Male BSPT Coupler

Part Number	Size (dash)	Coupling Size
PC100-MC06	06	3/8
PC100-MC08	08	1/2



Series 100 Male BSPT Probe

Part Number	Size (dash)	Coupling Size
PC100-MP06	06	3/8
PC100-MP08	08	1/2



Series 100 Coupler to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)
PC100-HC06	06	3/8
PC100-HC08	08	1/2



Series 100 Probe to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)
PC100-HP06	06	3/8
PC100-HP08	08	1/2



Series PCA19 Airflow and Vortex Female BSPP Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCA19-FC04	04	1/4	35
PCA19-FC06	06	3/8	35
PCA19-FC08	08	1/2	35



Series PCA19 Airflow and Vortex Male BSPT Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCA19-MC04	04	1/4	35
PCA19-MC06	06	3/8	35
PCA19-MC08	08	1/2	35



Series PCA19 Airflow and Vortex Coupler to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PCA19-HC04	04	1/4	35
PCA19-HC05	05	5/16	35
PCA19-HC06	06	3/8	35



Series PCV19 Airflow and Vortex Female BSPP Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCV19-FC04	04	1/4	35
PCV19-FC06	06	3/8	35
PCV19-FC08	08	1/2	35



Series PCV19 Airflow and Vortex Male BSPT Coupler

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCV19-MC04	04	1/4	35
PCV19-MC06	06	3/8	35
PCV19-MC08	08	1/2	35



Series PCV19 Airflow and Vortex Coupler to Hose Tail

Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PCV19-HC04	04	1/4	35
PCV19-HC05	05	5/16	35
PCV19-HC06	06	3/8	35



Series PCV19 Airflow and Vortex Female BSPP Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCV19-FP04	04	1/4	35
PCV19-FP06	06	3/8	35
PCV19-FP08	08	1/2	35



Series PCV19 Airflow and Vortex Male BSPT Probe

Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCV19-MP04	04	1/4	35
PCV19-MP06	06	3/8	35
PCV19-MP08	08	1/2	35



4.
3

Series PCV19 Airflow and Vortex Probe to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PCV19-HP04	04	1/4	35
PCV19-HP05	05	5/16	35
PCV19-HP06	06	3/8	35

Series PCY19 Airflow and Vortex Probe to Twin Coupling



Part Number	Max Working Pressure/bar
PCY19-TC	35

Series PCIA Instantair Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCIA-FC04	04	1/4	35
PCIA-FC06	06	3/8	35
PCIA-FC08	08	1/2	35

Series PCIA Instantair Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCIA-MC04	04	1/4	35
PCIA-MC06	06	3/8	35
PCIA-MC08	08	1/2	35

Series PCIA Instantair Coupler to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PCIA-HC04	04	1/4	35
PCIA-HC05	05	5/16	35
PCIA-HC06	06	3/8	35

Series PCIA Instantair Female BSPP Probe



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PCIA-HC04	04	1/4	35
PCIA-HC05	05	5/16	35
PCIA-HC06	06	3/8	35

Series PCIA Instantair Male BSPT Probe



Part Number	Size (dash)	Coupling Size	Max Working Pressure/bar
PCIA-MP04	04	1/4	35
PCIA-MP06	06	3/8	35
PCIA-MP08	08	1/2	35

Series PCIA Instantair Probe to Hose Tail



Part Number	Size (dash)	Thread Size (BSP)	Max Working Pressure/bar
PCIA-HP04	04	1/4	35
PCIA-HP05	05	5/16	35
PCIA-HP06	06	3/8	35

Series PCIM Macdonald Female BSPP Coupler



Part Number	Size (dash)	Coupling Size	Thread Size (BSP)	Max Working Pressure/bar
PCIM-FC04	04	1/4	1/4	35
PCIM-FC06	06	3/8	3/8	35
PCIM-FC08	08	1/2	1/2	35
PCIM-FC12	12	3/4	3/4	35
PCIM-FC16	16	1	1	35

Series PCIM Macdonald Female BSPP Probe



Part Number	Size (dash)	Coupling Size	Thread Size (BSP)	Max Working Pressure/bar
PCIM-FP04	04	1/4	1/4	35
PCIM-FP06	06	3/8	3/8	35
PCIM-FP08	08	1/2	1/2	35
PCIM-FP12	12	3/4	3/4	35
PCIM-FP16	16	1	1	35

Series PCIM Macdonald Male BSPT Coupler



Part Number	Size (dash)	Coupling Size	Thread Size (BSP)	Max Working Pressure/bar
PCIM-MC04	04	1/4	1/4	35
PCIM-MC06	06	3/8	3/8	35
PCIM-MC08	08	1/2	1/2	35
PCIM-MC12	12	3/4	3/4	35
PCIM-MC16	16	1	1	35

Series PCIM Macdonald Male BSPT Probe



Part Number	Size (dash)	Coupling Size	Thread Size (BSP)	Max Working Pressure/bar
PCIM-MP04	04	1/4	1/4	35
PCIM-MP06	06	3/8	3/8	35
PCIM-MP08	08	1/2	1/2	35
PCIM-MP12	12	3/4	3/4	35
PCIM-MP16	16	1	1	35

Series PCIM Macdonald Coupler to Hose Tail



Part Number	Size (dash)	Coupling Size	Thread Size (BSP)	Max Working Pressure/bar
PCIM-HC04	04	1/4	1/4	35
PCIM-HC06	06	3/8	3/8	35
PCIM-HC08	08	1/2	1/2	35
PCIM-HC12	12	3/4	3/4	35
PCIM-HC16	16	1	1	35

QUICK RELEASE COUPLINGS

Series PCIM Macdonald Probe to Hose Tail

Part Number	Size (dash)	Coupling Size	Thread Size (BSP)	Max Working Pressure/bar
PCIM-HP04	04	1/4	1/4	35
PCIM-HP06	06	3/8	3/8	35
PCIM-HP08	08	1/2	1/2	35
PCIM-HP12	12	3/4	3/4	35
PCIM-HP16	16	1	1	35



Service Couplings Self Sealing Valve for C & CA

Part Number	Coupling Size
SCV-C1-08	1/2



Service Couplings Valve for Male C

Part Number	Thread Size (metric)
SCV-C2-08	M22 x 1.5



Emergency Couplings Male C Coupling

Part Number	Coupling Size
ECM-C1-08	1/2
ECM-C2-08	M22 x 1.5



Service Couplings Operating Sleeve for Female C

Part Number	Coupling Size
SCS-C1-08	1/2



Emergency Couplings Female C Coupling

Part Number	Coupling Size
ECF-C1-08	1/2
ECF-C2-08	M22 x 1.5



Claw Lock Coupling Steel Male Thread BSPP

Part Number	Coupling Size (mm) 1	Thread Size 1
CCM-06	10	3/8
CCM-08	12	1/2
CCM-12	19	3/4
CCM-16	25	1



Emergency Couplings Self Sealing Valve for C & CA

Part Number	Coupling Size
ECS-C1-08	1/2
ECS-C2-08	M22 x 1.5



Claw Lock Coupling Hose Tail Steel Type

Part Number	Coupling Size (mm) 1	Hose Tail 1
CCHT-06	10	3/8
CCHT-08	12	1/2
CCHT-12	19	3/4
CCHT-16	25	1



Auxiliary Couplings Male C Coupling

Part Number	Coupling Size
ACM-C1-08	1/2
ACM-C2-08	M22 x 1.5



Claw Lock Coupling O Ring Seal

Part Number	Coupling Size (mm) 1
CCRS-06	10
CCRS-08	12
CCRS-12	19
CCRS-16	25



Auxiliary Couplings Female C Coupling

Part Number	Coupling Size
ACF-C1-08	1/2
ACF-C2-08	M22 x 1.5



Claw Lock Coupling Steel Female Threaded BSPP

Part Number	Coupling Size (mm) 1
CCF-06	10
CCF-08	12
CCF-12	19
CCF-16	25



4.
3

Claw Lock Coupling Steel End Cap



Part Number	Coupling Size (mm)	1
CCEC-06	10	
CCEC-08	12	
CCEC-12	19	
CCEC-16	25	

Claw Lock Coupling Brass Male Thread BSPP



Part Number	Coupling Size (mm)	1	Thread Size	1
BCCM-06	10		3/8	
BCCM-08	12		1/2	
BCCM-12	19		3/4	
BCCM-16	25		1	
BCCM-20	32		1 1/4	
BCCM-24	38		1 1/2	

Claw Lock Coupling Brass Female Thread BSPP



Part Number	Coupling Size (mm)	1	Thread Size	1
BCCF-06	10		3/8	
BCCF-08	12		1/2	
BCCF-12	19		3/4	
BCCF-16	25		1	
BCCF-20	32		1 1/4	
BCCF-24	38		1 1/2	

Claw Lock Coupling Hose Tail Brass Type



Part Number	Coupling Size (mm)	1	Hose Tail	1
BCCHT-06	10		3/8	
BCCHT-08	12		1/2	
BCCHT-12	19		3/4	
BCCHT-16	25		1	
BCCHT-20	32		1 1/4	
BCCHT-24	38		1 1/2	

Claw Lock Coupling Brass End Cap



Part Number	Coupling Size (mm)	1
BCCEC-06	10	
BCCEC-08	12	
BCCEC-12	19	
BCCEC-16	25	
BCCEC-20	32	
BCCEC-24	38	

Claw Lock Coupling Hose Tail Brass Safety Type



Part Number	Coupling Size (mm)	Hose Tail
BCCHTS-08	12	1/2
BCCHTS-12	19	3/4

Claw Lock Coupling Brass Triple Outlet



Part Number	Coupling Size (mm)
BCC3WAY	19

Shot Blast Couplings Brass Hose Coupling



Part Number	Coupling Size (mm)
BSBC-12	19
BSBC-16	25

Shot Blast Couplings Brass Female BSPP Thread



Part Number	Thread Size
BTSC-20	1 1/4
BTSC-24	1 1/2

Shot Blast Couplings Brass Nozzle Holders



Part Number	Coupling Size (mm)
BNH-12	19
BNH-16	25

Shot Blast Couplings Aluminium Hose Coupling



Part Number	Coupling Size (mm)
ASBC-12	19
ASBC-16	25

Shot Blast Couplings Aluminium Female BSPP Thread



Part Number	Thread Size
ATSC-20	1 1/4
ATSC-24	1 1/2

Shot Blast Couplings Aluminium Hose Nozzle Holders



Part Number	Coupling Size (mm)
ANH-12	19
ANH-16	25

4.
3